

C€ K

Alphanumeric LED display modules



Model TITAN message display Installation & Operating Manual Revision 2

- Simple message format
- ✓ Fully sealed IP65 all round
- Wall, suspension or panel mounting
- ✓ Viewing distances available from 25m to 120m
- ✓ Isolated serial input
- 7 different display formats
- ✓ Binary Input

Caution: There is a risk of electrical shock if this instrument is not properly installed



Caution: Risk of danger: Read the whole manual before you install this meter





Warranty

We warrant our products against defects in materials or workmanship for a period of three (3) years from the date of purchase.

In the event of a defect during the warranty period, the unit should be returned, freight (and all duties and taxes) prepaid by the Buyer to the authorised distributor from where the unit was purchased.

The Distributor, at its option, will repair or replace the defective unit. The unit will be returned to the Buyer with freight charges prepaid by the distributor.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from:

- 1. Improper or inadequate maintenance by the buyer.
- 2. Unauthorised modification or misuse.
- 3. Operation outside the environmental specification of the product.
- 4. Mishandling or abuse.

The warranty set forth above is exclusive and no other warranty, whether written or oral is expressed or implied. We specifically disclaim the implied warranties of merchantability and fitness for a particular purpose.

EXCLUSIVE REMEDIES

The remedies provided herein are the buyer's sole and exclusive remedies.

In no event shall we be liable for direct, indirect, incidental or consequential damages (including loss of profits) whether based on contract, tort or any other legal theory.

Contents

Warranty	2
Contents	3
Warnings	4
Introduction	5
General Description	6
Connections	7
Message Data Format	8
Message examples	9
Internal Switch Settings	10
Wall Mounting	11
Panel Mounting	12
Specifications	13
Notes	14
Notes	15
Declaration of Conformity	16

^{*} Need a manual urgently?
You can download manuals from our website www.london-electronics.com

Warnings

Please carefully read this manual and all warnings. Install the display ONLY when you are sure that you've covered all aspects.



Where the product is intended for "UL" installations, removal or addition of option boards is not permitted.



Check that the model number and supply voltage suit your application before you install the display.



Connect the display according to current IEE regulations, IEC61010 & NFPA:70 National Electric Code in USA.



Power supplies to this equipment must have anti-surge (T) fuses rated at 1A for 230V supply, 2A for 110V, 5A for 48VAC supply or 10A for DC supplies in the range 11-30VDC.



Don't touch any circuitry after you have connected the display, because there may be lethal voltages on the circuit board.



Do not apply power to the display if its case is open.



Only adjust on-board switches or connections with the power turned off



Make sure all screw terminals are tight before you switch the meter on.



Only clean the display's case and window with a soft damp cloth. Only lightly dampen with water. Do not use any other solvents.

Rear case screws - please note

The rear panel is held in place with socket flange button head screws, which only need to be gently tightened, with the supplied 2mm hex key.

Do not use tools to tighten or loosen the screws, as this could cause damage to the internal threads.

Safety FirstDon't assume anything Always double check. If in doubt, ask someone who is QUALIFIED to assist you in the subject.

Introduction

Please contact us if you need help, if you have a complaint, or if you have suggestions to help us improve our products or services.

If you contact us about a product you already have, please tell us the full model number and serial number, so that we can give you accurate and fast help.

This product has a 3 year warranty. We will put right or replace any display which is faulty because of bad workmanship or materials. This warranty does not cover damage caused by misuse or accident.

If you return a unit for repair, please include a detailed description of the problem, and the name of a contact who we can refer to for any questions. Please mark for the attention of the QA Department.

IMPORTANT

If this equipment is important to your process, you may want to buy a spare to cover possible failure or accidental damage in the future.

This is because during factory shutdown periods, you may have to to wait several weeks for an equivalent replacement, or we may have no stock at the time you urgently need it.

You may also need to pay extra carriage charges if you want a fast, guaranteed courier service. Warranty repairs or replacements are usually returned with a standard courier service.

We do not offer compensation for losses caused by failure of this instrument.

If you do not agree with these conditions, please return this item in unused condition, in its original packaging and we will refund the purchase price, excluding any carriage paid.

We thought you'd prefer to know about possible delays and extra charges now, rather than during a panic. A spare unit could help to avoid these issues.

We always try to improve our products and services, so these may change over time. You should keep this manual safely, because future manuals, for new designs, may not describe this product accurately.

We believe these instructions are accurate, and that we have competently designed and manufactured the product, but please let us know if you find any errors.

General Description

This series of displays accepts industrial signals to allow various alphanumeric messages to be displayed, such a weight, temperature, pressure, humidity etc.

The main function of this series is to give a clear readout of important information.

Various character heights are available, to suit the maximum viewing distance required in each installation. For every 10 metres of viewing distance required, use 1" of digit height.

Displays have four power supply options: 100-240 VAC, 5V DC, 48 VAC or 11-30 VDC

These displays must be installed fully assembled, and must be installed according to local electrical installation rules.

When properly installed, and provided they have been ordered with cable glands exiting the lower surface of the case, they provide ingress protection to IP65 / NEMA4X from all directions.

Safety



Caution: There is a risk of electrical shock if this display is not properly installed



Caution: Risk of danger: Read the whole manual before you install this display

Obey all safety warnings in this manual, and install the display according to local wiring and installation regulations. Failure to follow these guidelines may cause damage to the display, connected equipment, or may be harmful to personnel.


Any moving mechanical device controlled by this equipment must have suitable access guards to prevent injury to personnel if the display should fail.

Connections

Titans are modular, so depending on which build format you order, the location of the input board and power supply connections will vary.

Input Data Connections

This is the Titan controller board, which you will connect to if you are feeding RS232, RS485 or contact closure signals to the display...

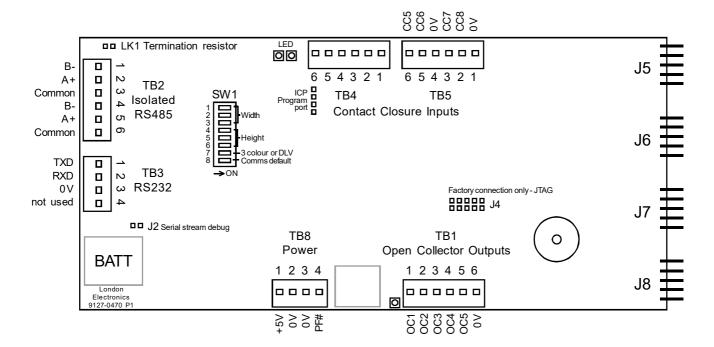

Power Connections:

A labelled power connector within the case will identify the required power connections

```
Message data format
Standard Message Format:
      Start Character (1 byte)
      Message Type (1 byte ASCII encoded)
      Device Address (1 byte ASCII encoded)
      Command Code (1 byte ASCII encoded)
      Sub-command Code (1 byte ASCII encoded)
      Flags (1 byte ASCII encoded)
      Data (0 to [MAX DATA LENGTH] bytes)
      Checksum (1 byte ASCII encoded)
      End Character (1 byte)
Start Character: 0x02
Message type: 0xF8 to 0xFF
The message type provides for multiple message formats. The value range is outside that of the panel meter device
address range allowing meters and displays to co-exist on the same bus.
0xF8 Standard Message format (detailed above)
0xF9 Standard Message format (detailed above) but without the checksum field
0xFA Reserved
0xFB Reserved
0xFC Response to F8 Message
0xFD Response to F9 Message
0xFE Reserved
0xFF Reserved
Device Address:
0x00 to 0xF7
0x00 is the broadcast address. A response must not be requested unless it's guaranteed that there is only one device
within the specified group.
Command Code: 0x00 to 0xF7
Sub-Command Code: 0x00 to 0xF7
Flags: 0x00 to 0xFF
For command messages:
Bit 0, 0 = Do not respond, 1 = Response required
Bit 1, 0 = Don't Beep, 1 = Beep when command completed
Bit 2,
Bit 3,
Bit 4,
Bit 5.
Bit 6,
Bit 7,
The beep will sound for all recognised messages including broadcast messages and those with parameter errors.
The beep will not sound for messages with invalid command or invalid sub command code.
For response messages:
Bit 0, 0 = Command completed successfully, 1 = An error occurred
```

Bit 1. Bit 2, Bit 3,

Bit 4,

Bit 5,

Bit 7, 1 = Port is locked and command was ignored. No data returned If an error occurs, a 16-bit error code is returned in the data field


Data:

This field can be zero length depending on the command code.

Checksum:

Not yet implemented. End Character: 0x03

Message examples

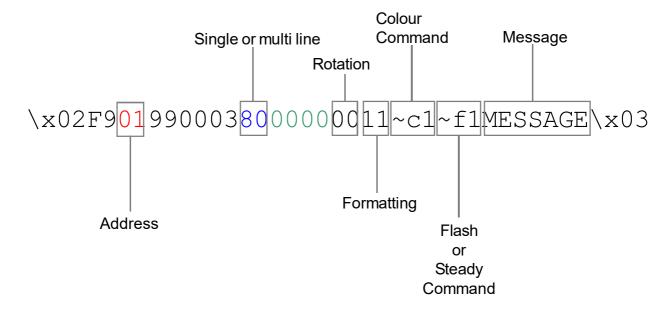

Colour Commands are:

 \sim c0 = Red

~c1=Green

~c2=Amber

Flash or Steady commands:

~f0 = Steady

~f1 = Flashing

The Colour and Flash/Steady commands are placed immediately before the message text.

You can include multiple colour and flash commands in a message, simply by inserting the appropriate command prior to a section of text.

For example, to display a steady Hello in green followed by a flashing red 123 we would send:-

~c1~f0Hello~c0~f1123

Messages longer than the display will scroll automatically.

Formatting allows you to justify text, if it is small enough to completely fit within the bounds of the display: The formats available are:-

00 = Left Justified

01 = Centered

02 = Right justified

11 =

Rotation:

00 = Rotate Left

01 = Fixed

02 = Rotate Right

We provide a free software tool called Titan Manager which allows you to create messages on PC and then send them to the display via a com port.

For network connections, please see our dedicate guide at:https://www.london-electronics.com//Titan_Network_Installation_Guide.pdf

Internal Switch settings

Display	Width
SW13	

op.a,			
SW1,3	SW1,2	SW1,1	
OFF	OFF	OFF	32 pixels
OFF	OFF	ON	64 pixels
OFF	ON	OFF	96 pixels
OFF	ON	ON	128 pixels
ON	OFF	OFF	160 pixels
ON	OFF	ON	192 pixels
ON	ON	OFF	224 pixels
ON	ON	ON	256 pixels

Display Height

SW1,6	SW 1,5	SW1,4	
OFF	OFF	OFF	8 pixels
OFF	OFF	ON	16 pixels
OFF	ON	OFF	24 pixels
OFF	ON	ON	32 pixels
ON	OFF	OFF	Reserved
ON	OFF	ON	Reserved
ON	ON	OFF	Reserved
ON	ON	ON	Reserved

Display Type

SW1,7

OFF Red/Green Tiles Fitted for Tri-colour display

Red/Red Tile Fitted for Red DLV display (Forces all colours to yellow) ON


Communications Default


SW 1,8

OFF Communications controlled by on-board configuration

ON Communications forced to 38400, 8, N, 1 with Device Address = 0x01

Titan - Wall Mounting dimensions

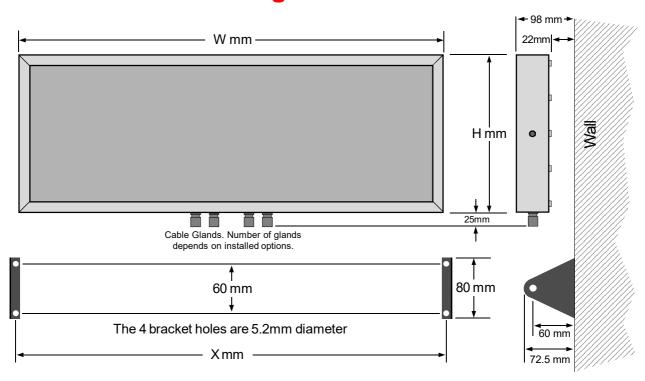


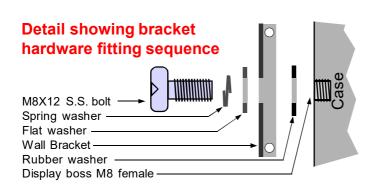

The side holes in the two brackets are 8.5mm dia. to accept M8 bolts.

Display Format	X mm	H mm	W mm
64 x 8	523	98	540
80 x 8	643	98	660
96 x 8	767	98	784
128 x 8	1009	98	1026
160 x 8	1251	98	1268
192 x 8	1493	98	1510
32 x 16	279	158	296
64 x 16	523	158	540
80 x 16	643	158	660
96 x 16	767	158	784
128 x 16	1009	158	1026
160 x 16	1251	158	1268
192 x 16	1493	158	1510
224 x 16	1735	158	1752
64 x 32	525	278	542
128 x 32	1009	278	1026
256 x 32	1977	278	1994

Titan - Panel mounting dimensions

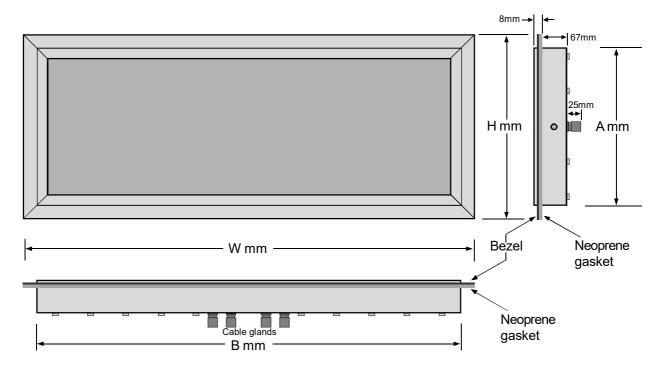

Panel cutout dimensions

 $A+3mm(h) \times B+3mm(w)$

Bezel is 18mm wider/taller than case

Neoprene gasket Panel M8 x 15 bolt Spring washer Flat washer

Detail showing bracket hardware fitting sequence

Wall Bracket

Fit last M8 x 20 bolt, gasket compresser

Display Format	B mm	A mm	W mm	H mm
64 x 8	541	98	559	116
80 x 8	661	98	679	116
96 x 8	785	98	803	116
128 x 8	1027	98	1045	116
160 x 8	1269	98	1287	116
192 x 8	1511	98	1529	116
32 x 16	297	158	315	176
64 x 16	541	158	559	176
80 x 16	661	158	679	176
96 x 16	785	158	803	176
128 x 16	1027	158	1045	176
160 x 16	1269	158	1287	176
192 x 16	1511	158	1529	176
224 x 16	1753	158	1771	176
64 x 32	543	278	561	296
128 x 32	1027	278	1045	296
256 x 32	1995	278	2013	296

Specifications

Case Material Heavy duty welded uPVC

Connectors Internal detachable Screw Terminal connectors accessed via

compression glands

Environmental Storage Temperature range -20 to +70C, non condensing

Operating temperature range 0 to 50C. Internal heater option

available for use in conditions down to -25C

Allow 30 minutes for this product to reach thermal equilibrium.

Power Options

Burden

110VAC, 240 VAC, 11V DC-30 VDC optional

Depends on pixel count. Typically 15w per 500 pixels

Colours Red Green and Amber - colours may be mixed within tests.

Reading distance 50mm characters can be read to 20m

100mm characters can be read to 40m

Viewing angle Indoor brightness displays = 160 degrees

Outdoor brightness displays = 30 degrees to 1/2 brightness

Sealing IP65 all round, provided the display is mounted vertically and that all

cable glands and rear case-closure screws are properly secured.

Message size. Depends on number of pixels. Messages can be longer than the

display width, in which case they will scroll.

Message Storage As standard, 64 messages may be stored within the display, for

recall via contact closures representing a binary number.
Capacity may be optionally increased to 254 messages

Input Signals RS232

RS422 and RS485

Baud rate selectable from 300 to 115200

Data format selectable 701,7e1,7n2,80,8E,8n,8n2

Address 00 to FF

Contact Closures (to call up stored messages)

Open circuit voltage = 5V DC Closed circuit current = 1mA

Ethernet TCP/IP 100/10 (Optional)

Profibus DP (Optional)

Addressing 254 unique addresses available

Notes

Notes

Declaration of CE Conformity

Declaration Reference: Titan

Issue Date : 21 September 2011

Products Covered : Titan Series of message displays

Title : DOC-Titan

This is to confirm that the Product covered by this declaration has been designed and manufactured to meet the limits of the following EMC Standard:

EN61326-1:1997

and has been designed to meet the applicable sections of the following safety standards

EN61010-1:2001



Conditions

The displays are allowed to display aberrations during periods when they are subjected to interference, but must recover automatically when disturbance ceases without the need for human intervention, such as resetting, power-down etc.

The displays covered by this certificate must be installed in adherence to the following conditions:-

Signal cabling shall be routed separately to power carrying cabling.

All signal cabling shall be screened. The screen shall only be terminated to the power earth terminal at the display end of the cable.

Declared as true and correct, for and on behalf of London Electronics Ltd.

J.R.Lees Director