

London Electronics Limited

Warren Court, Chicksands, Shefford, SG17 5QB, England

Tel +44 (0)1462 850967 Fax +44 (0)1462 850968



e mail: easy4u@london-electronics.com

web: <http://www.london-electronics.com>



Model 88-DCV (Prototype)

Digital DC Voltage Indicator

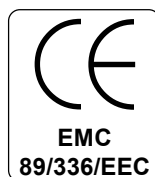


Table of Contents

- 1) Very Important Warnings
- 2) Important Introductory Notes
- 3) Equipment Specifications
- 4) Panel requirements
- 4) Connection Details
- 5) Adjustments and Calibration
- 6) Declaration of Conformity



Keep a note of your settings here.

Some time in the future, you or a colleague may need to recalibrate or replace this meter. We suggest you write down your settings now to avoid panic and confusion in a crisis.

Meter Serial number

Input signal range (for example 4-20mA)

Display range (for example 0 to 100.0 %)

Important Warnings



Carefully read all warnings and ONLY install the meter when you are sure that you have properly covered each point.

- * Connect the meter according to current IEE regulations and separate all wiring according to IEC1010.
- * You should fit a 250mA fuse to protect power cabling from faults.
- * Check that the model number suits your application before you install the meter.
- * Don't touch any circuitry after you have connected the meter, because there may be lethal voltages on the circuit board.
- * We designed this meter for Installation class II service only. This is because it has exposed electrical and power terminals, so you must install it in an enclosure to protect users from electric shock.
- * We designed this meter for Pollution-Degree 2 environments only. This means you must install it in a clean, dry environment, unless it has extra protection from a splashproof cover, such as our SPC4
- * Only adjust on-board switches or connections with the power turned off
- * Make sure all screw terminals are tight before you switch the meter on.
- * Only clean the meter with a soft damp cloth. Only lightly dampen with water. Do not use any other solvents.

***Safety FirstDon't assume anything..... Always double check.
If in doubt, ask someone who is QUALIFIED to help you in the subject.***

Important Introductory Notes

Please contact us if you need help, if you have a complaint, or if you have suggestions to help us improve our products or services for you.

If you contact us about a product you already have, please tell us the full model number and serial number, so that we can give you accurate and fast help.

This product has a 2 year warranty. We will put right or replace any meter which is faulty through bad workmanship or materials. This warranty does not cover damage caused by misuse or accident.

IMPORTANT

If this equipment is important to your process, you may want to buy a spare to cover possible failure or accidental damage in the future.

This is because at some times, for example during our factory shutdown periods, you may have to wait several weeks for an equivalent replacement. Or, we may have no stock at the time you urgently need it.

You may also need to pay extra carriage charges if you want a fast, guaranteed courier service. Warranty repairs or replacements are normally returned with a standard courier service.

We do not offer any compensation for losses caused by failure of this instrument.

If you do not agree with these conditions, please return this item now, in unused, clean condition, in its original packaging and we will refund the purchase price, excluding any carriage paid.

We thought you'd prefer to know about possible delays and extra charges now, rather than during a panic.

We always try to improve our products and services, so these may change over time. You should keep this manual safely, because future manuals, for new designs, may not describe this product accurately.

We believe these instructions are accurate, and that we have competently designed and manufactured the product, but please let us know if you find any errors.

Equipment Specifications

| | |
|------------------------------|---|
| Input Signal..... | 0.4 to 2V DC |
| Resolution..... | 1 part in 2000 max. resolution |
| Input Resistance..... | 1Meg Ohms nominal |
| CMRR..... | 120 dB DC to 100 Hz. |
| NMRR..... | 50 dB, 40 to 60 Hz. |
| Speed of Response..... | 0.5 Second time constant |
| Decimal Point Selection..... | Jumper selection behind bezel |
| Accuracy..... | +/- 0.1% of reading, +/- 1 count |
| Temperature stability..... | ZERO +/- 0.2 count/C, SPAN +/-0.015%/C |
| A/D Technique..... | Dual slope integrator |
| Conversion Rate..... | 2 1/2 readings per second |
| Integration Time..... | 100 milliseconds |
| | |
| Display Type..... | Reflective LCD |
| Digit Height..... | 12.7 mm |
| Digit Colour..... | Black, on a light grey background |
| | |
| Excitation Supply..... | 5V DC unisolated from power or signal input |
| Current Capacity..... | 20mA max. |
| | |
| Power Supply..... | 24V DC nominal (20 to 28V) |
| | |
| Mechanical..... | 1/8 DIN bezel |
| Bezel Size..... | 48 mm high x 96 mm wide |
| Cutout Size..... | 45 mm high x 92 mm wide |
| Depth behind Panel..... | 80 mm |
| Weight..... | 100 g |
| Case Material..... | Polycarbonate UL rating 94V-0 |
| | |
| Environmental | |
| Operating Temperature..... | -10 to +50 degrees Centigrade |
| Storage Temperature..... | -20 to +70 degrees Centigrade |
| Humidity..... | 90 % at 50 degrees C, non condensing |

Panel Requirements



Separate all power carrying and signal cables according IEC 1010

Installation Class II
Pollution degree 2




Install this meter in a secure enclosure, to prevent accidental access by people to the connections on the meter's rear terminals. These may, under plant fault conditions, be at a dangerous voltage above ground potential.

CUTOUT DIMENSIONS Cut a hole 45 mm high and 92 mm wide, with minimal radius.

Connections

Connector Specifications :- [VDE Rated Voltage, group B insulation VAC = 380]-[VDE Rated Current = 8 Amperes.]
[Vibration Immunity per VDE0611 <10g]-[Rated Number of mating cycles <100]-[Screw Clamp material/plating Steel/ZnCc]
[Contact Spring material/plating CuSN/gal SnPb]-[Plug-in force, per pole is from 3 to 6 Newtons]-[Disconnect force per pole is from 4 to 7 Newtons]-[Screw clamp tightening torque recommended 0.5Nm]-[Solid wire csa between 0.13 to 1.5mm²] [Multistrand wire csa from 0.5 to 1.5mm²]- [AWG conductor range from 22 to 16]-[Gauge to DIN/EN50027 Size A1]

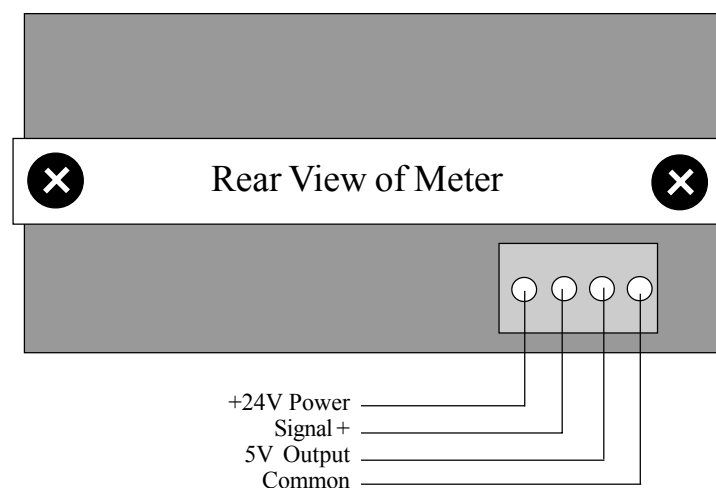

IMPORTANT: Don't run signal wires near any power-carrying cables. Power-carrying cables could interfere with the small signals you want to measure. Use screened cable, in its own separate conduit or tray. Connect the screen to a clean earth point as near to the meter as possible.

Adjustments & Calibration



Zero Adjust while you apply 0% input signal to display 0% display value.

Span Adjust while you apply 100% input signal to display 100% display value

Declaration of Conformity

Declaration Number : 88-PRO Iss. 2
Issue Date : 21 April 1997
Products Covered : 88-PRO
Title : 1/8 DIN loop powered DPM

We designed and manufactured these Products to meet the following specifications :

EN55022:1987 Conducted Emissions: Class B
EN55022:1987 Radiated Emissions : Class B
IEC801-2:1984 Electro-Static Discharge Immunity: 8kV Air
IEC801-3:1984 Radiated ElectroMagnetic field Immunity: 3V/m

The products conform with these standards:

EN50081-1:1992 (normative)
EN50082-1:1992 (normative)

and comply with the requirements of Council Directive 89/336/EEC for Electro-Magnetic Compatibility, & are designed to meet 72/23/EEC safety directive.

To confirm EMC compliance, models within the range have been independently tested and certified by MARCONI INSTRUMENTS EMC Department.

MARCONI CERTIFICATE # : TC96/0029B
MARCONI CERTIFICATE Issue# : 1
MARCONI Certificate Issue Date : 14 February 1996

Conditions

The meters are allowed a worst case error of 1% of A/D range during electro-magnetic disturbance, and must recover automatically when disturbance stops, without the need for human intervention, such as resetting, power-down etc.

The meters covered by this certificate must be installed according to the following conditions :-

Signal cabling must be routed separately to power carrying cabling (includes relay output wiring)
All signal cabling must be screened. The screen must only be connected to the power earth terminal

Signed as true and correct, for and on behalf of London Electronics Ltd.

Warren Court, Beds.

.....
J.R.Lees Director