

Wireless remote programmer: Range 75 metres

The wireless remote handheld replaces the 4 buttons normally fitted to the front of the display.



The buttons shown in the manual equate to the buttons 1 to 4, numbered from left to right as shown below.

To activate the Digit button, press button 1

To activate the UP button, press button 2

To activate the DOWN button, press button 3

To activate the OK button, press button 4

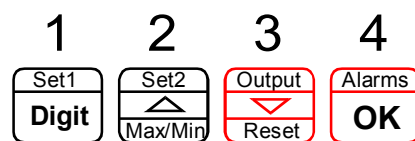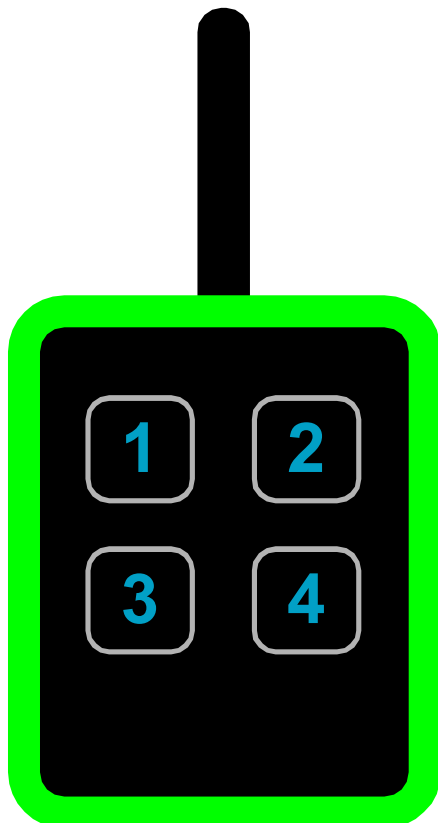

As shown in operating manual